


CORNELL®

User Manual

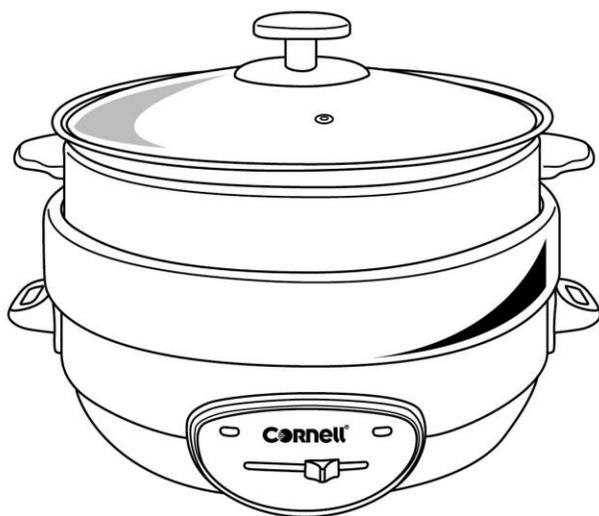

**Multi
Cooker**

CMC-E381


General Safety Precautions

1. Thank you for your purchase of this multi cooker. Read all instructions carefully. Keep this User Manual for future reference.
2. Always unplug the multi cooker from the power socket before cleaning or when not in use.
3. Always attach the power cord to the multi cooker **BEFORE** you plug it into the power socket. To disconnect the multi cooker, switch it off first before removing the power plug from the power socket.
4. Close supervision is necessary when operating the multi cooker near children. Ensure that the power cord does not hang over the work surface.
5. Do not use the multi cooker for other than its intended use.
6. Do not operate the multi cooker with a damaged power cord set or plug. Any repairs should always be undertaken by an authorized service centre.
7. Always place the multi cooker on a flat sturdy surface. When moving it, always ensure not to touch hot surfaces and avoid spilling any hot liquids it may contain.
8. Do not immerse the multi cooker or its electrical parts into water or any other liquids.
9. Use of accessories or equipment not supplied by the manufacturer may result in damages or malfunction on the multi cooker or injuries to the user.
10. This multi cooker should not be used by people who are physically or mentally impaired (including children) unless proper guidance is provided during operation.

Specifications

Model No.	CMC-E381
Voltage / Frequency	220-240V~, 50Hz
Power	1500-1780W

Parts Identification

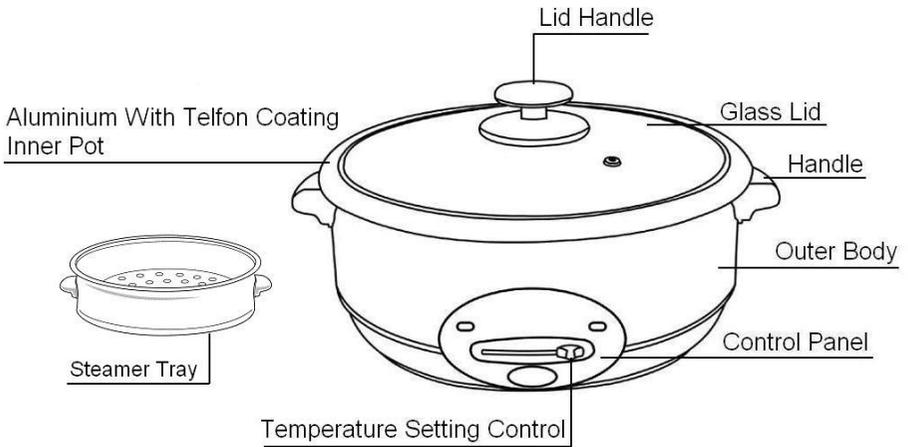

Operating Instructions

Before Using

- Please read these instructions carefully before using this appliance and keep them for future reference.
- Ensure that the local main voltage is same as stated on the appliance.
- Never use the multi cooker near to the sink, bathtub, shower or any other places that may contain water.
- Remove any protective films or stickers from the multi cooker before using it for the first time.
- Ensure that the power switch is in the “OFF” position.

Operating Instructions

- Please dry the inner pot and steamer tray well before use. Put the inner pot inside the cooker properly, connecting it well with the heating tray. Otherwise, it may cause damage.
- The multi cooker has many functions. You may roast, stew or slow cook, fry and even steam food with this versatile appliance.
- Always start any cooking functions at the lowest setting and gradually increase the temperature to suit the food being cooked. The temperature setting is variable. Choose the best setting for desired cooking results.
- Always put solid food into the inner pot first before adding water or stock to avoid splashes. Use the lid to speed up the cooking process and to retain the flavor of the dish.
- Always use the wooden spatula for stir frying or stirring so as not to damage the inner pot.

How To Steam Food

1. Place the inner pot into the multi cooker. Add water up to 1.0 cm depth or at least 3 measuring cups full of water. Place the steamer tray on top of the inner pot.
2. Place food to be steamed on the steamer tray.
3. Attach the power cord to the multi cooker and plug it into the power socket. Switch the power on. Adjust the temperature setting to the required temperature.
4. Use a timer to remind you when to switch off the multi cooker.
5. When steaming function is complete, move the temperature setting control to the “OFF” position and switch off the power. Be mindful when opening the lid as the steam discharged is very HOT.

Care and Cleaning

- Always unplug the multi cooker from the power socket prior to cleaning.
- Do not use the abrasive sponge, scouring pads or stiff brush to clean the multi cooker. The inner pot may be cleaned with mild soapy water using a sponge or soft cloth.
- Occasionally wipe the exterior surfaces with a damp cloth.
- Occasionally check that there are no objects in the interior parts. Remove them if found.
- In an event of the multi cooker malfunctioning, it should be taken to the nearest authorized service centre.



Marketed by:

CORNELL SALES & SERVICE SDN BHD (604369-P)

Lot 11A, Jalan 223, Section 51A,
46100 Petaling Jaya,
Selangor Darul Ehsan, Malaysia.

InfoLine: 1-800-881-770
www.cornellappliances.com