




Operating Instructions

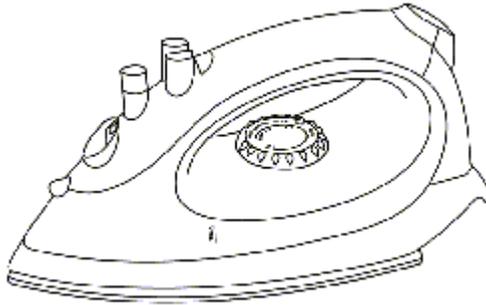


Steam Iron

Model No.: CI-S18

Please read this instruction carefully before use

PARTS DESCRIPTION

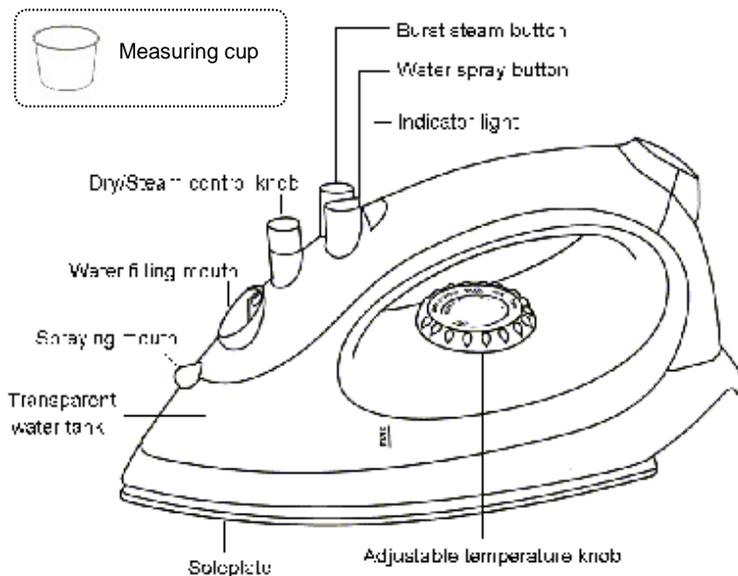

SAFETY PRECAUTIONS

1. Please read this guide carefully before use and keep it well.
2. Never immerse the iron in the water or other liquids to avoid damage and danger.
3. Never leave the iron unattended while it is connected to the mains.
4. Place the iron in a place far away from children's access to avoid careless touch by children.
5. The soleplate of the iron can become extremely hot and may cause burns if touched.
6. This appliance is intended for household use only.

BEFORE FIRST USE

1. Check if the voltage indicated on the type plate corresponds to the mains supply.
2. Remove sticker or protective foil from the soleplate if there is any.

SETTING THE TEMPERATURE

- Set the temperature dial to the required ironing temperature by turning it to the position of the temperature indicator (see Table 1).
- When you do not know what kind of fabric(s) the article is made of, try to iron on a spot, which will be invisible when you wear it. If some kind of finish has been applied, the textile can best be ironed on somewhat lower temperature.
- Iron the reverse side of the silk, woolen and synthetic materials to prevent shiny spots.

Textile Type	Temperature Control		Better ironing instructions
Polyamide fiber	•	Low	Dry ironing; inside of cloth or ironing with cloth-padding to avoid the spotting
Nylon	•	Low	Dry ironing; inside of cloth, Ironing: Collar, sleeve, placket, can lightly ironing the front of cloth
Silk	••	Normal	Dry ironing; inside of cloth
Wool	••	Normal	Unsuitable for dry ironing
Cotton & Linen	•••	Normal & High	Steam ironing; spray according the crimple and thickness of cloth, power steam iron the back of fuscous cloth to avoid "aurora"

Table 1

Instruction Label:

	Ironing thin cloth
	Ironing inside of cloth
	Do not iron this article

- Adjust the knob toward nylon if your clothes isn't the same as one of the list
- Cushion cloth under the ironing heat-sensitive clothes to prevent to transfigure and destroy

SPECIFICATIONS

Model	CI-S18
Rated Voltage	220~240V
Rated Frequency	50Hz
Rated Power	1200~1400W

OPERATION

A. Dry Ironing

1. Classify the clothing according to the tables attached before use.
2. Set the steam control dial to position O (= no steam).
3. Place the iron vertically and set the temperature dial to the recommended position.

Filling the water tank

1. Never immerse the iron in water.
2. Unplugged the socket.
3. Tilt the iron backwards.
4. Fill the water tank with cold tap water up to maximum level. Do not fill the water tank beyond the MAX indication.

B. Steam Ironing

1. Ensure that there is enough water in the water tank.
2. Turn the variable steam knob to the required setting for different types of fabric.
3. The indicator light will turn “OFF” when the indicated setting reaches the correct temperature.

C. Burst Steam

1. Set the temperature control to position “MAX”, and rotate the steam button to position  the indicator light will turn on. Wait for 2-3 minutes until the light is off, now you can start ironing.
2. Wait a few seconds for the steam to penetrate the fabric before pressing the button again for more steam.
3. If the temperature pilot light comes on again, this indicates the iron is heating up again.
4. Wait until the pilot light turn off, then you can recommence ironing.

D. Spray Functions

1. Press the spray function when ironing heavily creased clothes.
2. You may press water-spraying button repeatedly, the iron can spray vapor to accelerate the rate of ironing.

CARE and CLEANING

1. Before cleaning, remove the plug from the wall socket and allow the iron to cool down sufficiently.
2. The appliance can be cleaned with a damp cloth. Do not use abrasives on the soleplate.

3. Clean the water tank regularly by filling it with water and shaking it. Then pour the water out.
4. CAUTION: Never use scouring pads, abrasive or harsh cleaners as this may scratch the surface.

TROUBLESHOOTING

Problem	Possible cause(s)	Solution
The iron is plugged but the soleplate is cold	Connection problem	Check the mains cord, plug and wall socket
	Temperature dial set at MIN	Set the temperature dial to the required position
No steam	No water in water tank	Fill the water tank
	The steam control has been set to position O	Set the temperature to steam position
Water leaks from the soleplate during ironing	The set temperature is too low	Set the temperature control dial to a temperature suitable for steam ironing
Water leaks from the soleplate while the iron is cooling down or after it has been stored	The iron has been put in horizontal position while there is still water in the water tank	Empty the water tank and set the steam control to position O before storing the iron Place the iron on its heel
Not hot	The iron is unplugged	Put the plug in the socket
	Power cut or fuse cut	Change fuse or stop using

- * Sent the faulty iron to a qualified service center for repair.
DO NOT repair the product by yourself.

STORAGE

1. Remove the plug from the wall socket.
2. Empty the water tank.
3. Set the steam control to position (O), stand the iron upright and let it cool down sufficiently.
4. The wire cord can be loop around the cord storage.
5. Regularly check the wire cord and keep it in a dry place and safe condition.