


Safety Precautions

- 1) Always switch off and unplug the appliance from the main electrical supply **BEFORE** cleaning and also when the appliance is not in use.
- 2) **NEVER IMMERSE THE APPLIANCE, POWER CORD OR PLUG INTO WATER OR OTHER LIQUIDS.** Please refer to section on "Care and Cleaning".
- 3) Close supervision is needed when operating appliance near children. Ensure the electrical cord does not hang over the work surface.
- 4) Always connect the power cord to the appliance **BEFORE** you plug in to the main electrical supply. To disconnect the appliance, switch off the main electrical supply before removing the plug from the appliance.
- 5) Do not operate the appliance with a damaged cord set, or plug. Any repairs should always be carried out by the Customer Service Centre or by an authorized service centre.
- 6) Do not place the appliance on or near a hot gas or electric burner, in a heated oven, or near easily flammable materials.
- 7) Do not use outdoors or while standing in a damp area.
- 8) Do not use this appliance for any other purposes than its intended use.
- 9) Always place appliance on a flat sturdy surface. When moving appliance, always take precaution not to touch hot surfaces. Extreme caution must be used when moving an appliance containing hot liquids.
- 10) Use of accessories or equipment not supplied by the manufacturer may cause damage or result in the malfunctioning of your appliance or bodily injuries.

Parts Identification

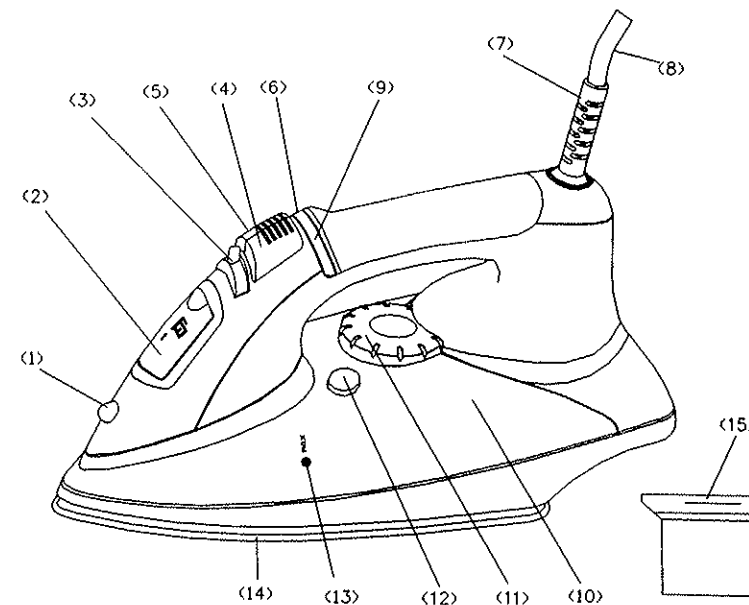

1. Spray Nozzle
2. Water filling inlet
3. Steam button
4. Shot-steam button
5. Spray button
6. Auto shot off indicator light
7. Swiveling cord protector
8. Power Supply cord
9. Plate temperature control light
10. Transparent water tank
11. Temperature Control Dial
12. Self-cleaning button
13. Maximum filling level
14. Plate with steam vents
15. Measurement cup

Specifications

MODEL	CI-S19
RATED VOLTAGE	220-240V~
RATED WATTAGE	1830-2180W
FREQUENCY	50Hz




 
Operating Instructions

1. Some parts of the iron have been slightly greased. This may cause the iron to emit some smoke when you switch it on for the first time and will cease shortly. This is normal.
2. Remove any stickers or protective foil from the soleplate. Clean the soleplate with a soft cloth.
3. Protect the soleplate in case of being left with some nick.
4. Textile which has been applied any sort of finishing (gloss, crinkle, relief etc.) is best ironed at lower temperatures.
5. Sort the laundry according to ironing temperature: put wool with wool, cotton with cotton, etc. The iron heats up more quickly than it cools down. Therefore, start ironing articles that need to be ironed at lowest temperature, such as those made of synthetic fibre.

6. Temperature guide

Follow the ironing instructions on the garment label. If there are no instructions but you do know the kind of fabric, please consult the table.

Warning: If the fabric consists of various kinds of fibre, always select the temperature required by the most delicate fibre.

GARMENT LABEL	FABRIC TYPE	THERMOSTAT REGULATION
	synthetic	. low temperature
	silk - wool	.. medium temperature
	Cotton - linen	... high temperature
	Fabric not to be ironed	

Steam Ironing

Filling with water

1. Set the steam button (3) to "0".
2. Fill in water through the water-filling inlet using the measurement cup (15).
3. Fill in water according to the filling method above, and place the iron on its end.
4. Clean any remaining water outside of the water reservoir, and when finished ironing, empty the water reservoir.
5. You can use normal tap water. However, if the water is very hard, it is advisable to use distilled water.

Selecting the temperature

1. Place iron in a vertical position.
2. Insert the main plug into the wall socket (ensure the correct voltage).
3. Set the temperature control (11) at the required position.
4. The plate temperature control light (9) indicates that the iron is heating up. Wait until the plate temperature control light goes off before ironing.

Warning: During ironing, the plate temperature control light (9) comes on at intervals, indicating that the selected temperature is maintained. If you lower the thermostat temperature after ironing at a high temperature, do not start ironing until the plate temperature control light comes on again.

Selecting the steam

1. Adjust the steam button (3) to a position between minimum and maximum depending on the quantity of steam required and the temperature selected.

Warning: The iron gives off steam continuously only if you hold the iron horizontally. You can stop the continuous steam by placing the iron in a vertical position or by moving the steam selector to "0". As indicated on the temperature dial button (11) and in the initial table, you can only use steam at the highest temperatures. If the selected temperature is too low, water may drip onto the plate.

Selecting Shot-steam and steam when ironing vertically.

1. Press the shot-steam button (4) to generate a powerful burst of steam that can penetrate the fabrics and smooth the most difficult and toughest creases. Wait for a few seconds before pressing again.
2. By pressing the shot-steam button at intervals you can also iron vertically (curtains, hung garments, etc.).

Warning: The shot-steam function can only be used at high temperatures. Stop the steam emission when the plate temperature control light (9) comes on, then start ironing again only after the light has gone off.

Dry Ironing

1. To iron without steam, follow the instructions in section "steam ironing", leaving the steam selector (3) on position "0".

Spray Function

1. Make sure that there is water in the reservoir. Press the spray button (5) slowly (for a dense spray) or quickly (for a vaporized spray).

Warning: For delicate fabrics, we recommend moistening the fabric beforehand using the spray function (5), or putting a damp cloth between the iron and the fabric. To avoid staining, do not use the spray on silk or synthetic fabrics.

Care and Cleaning

1. CAUTION: Ironing over zippers/rivets on jeans, etc. may scratch or damage the soleplate.
2. Turn the temperature control (3) to position "0" and unplug the power. Stand the iron upright and let the iron to cool completely before cleaning and storing.
3. Lift up the iron with the filling hole downwards to empty the remaining water from the water-filling inlet (2) and ensure it is completely empty. Connect the iron to a power supply outlet and turn the temperature button to maximum position to evaporate the remaining water in the tank.
4. After the water in the tank has completely evaporated, set the temperature knob to "0" position and unplug the iron from the power supply.
5. Wipe the soleplate with a damp cloth and using a non-abrasive cleaner.
6. If the power cord is damaged, have it replaced by a qualified service agent to avoid hazards.
7. For storage, place it vertically and never horizontally.