


# CORNELL®

## User Manual

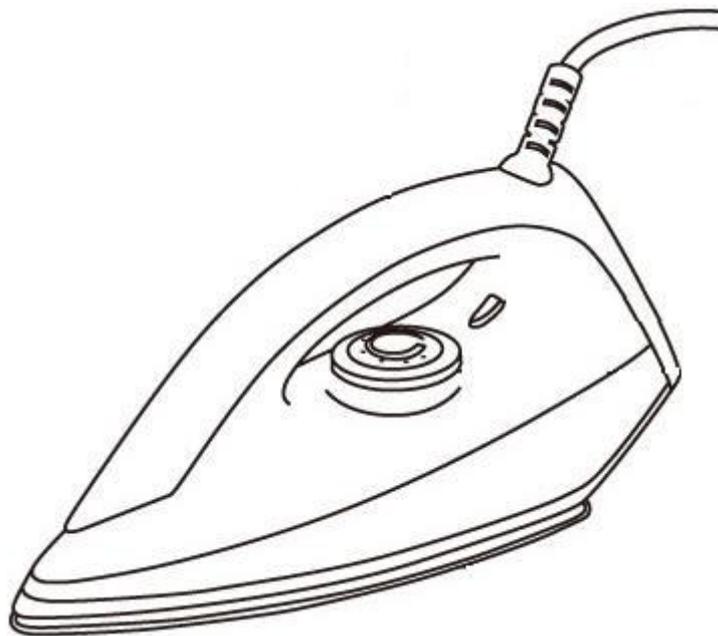

**Dry  
Iron**

**CI-SD26BE**


**CI-SD26GN**

## CONTENTS

<b>Title</b>	<b>Page No.</b>
Parts Introduction	2
Technical Specifications	2
Before Using	2
How to Use Iron	3
Cleaning and Maintenance	3
Important Guidelines	3

**Thank you for choosing CORNELL appliances.  
May you have an enjoyable experience using our products.**

## **Parts Introduction**

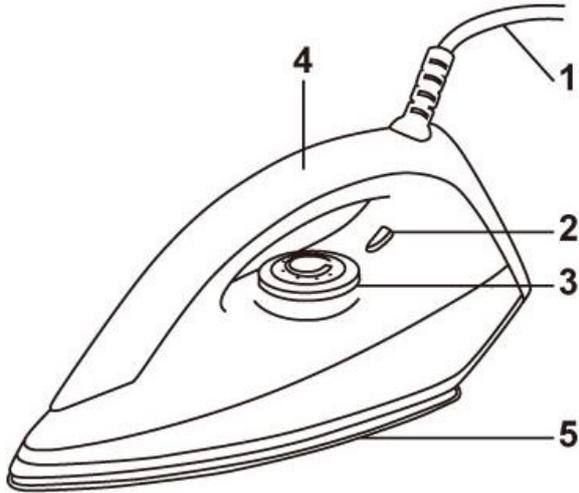

1. Power Cord
2. Light Indicator
3. Temperature Control Knob
4. Handle/Sole Plate

## **Technical Specifications**

Model	CI-SD26BE / CI-SD26GN
Voltage	230V
Power	1100W
Frequency	50/60Hz

## **Before Using**

- Please read these instructions carefully before use and keep them for future reference.
- Check your local main voltage whether it is the same as stated on the rating label.
- Before using for the first time, remove any protective film or sticker from the product.
- Ensure the power knob is at the off position.

## **How to Use Iron**

- The iron should be turned off before plugging into the power outlet.
- Plug in the iron and set the temperature control knob to the temperature required. Do not start iron immediately.
- Rest the iron on its heel for a few minutes until the indicator light goes off before you start ironing.
- The indicator light will turn on and off while you are ironing. It is normal and it is showing that the iron is maintaining the heat setting chosen.
- Begin ironing with the fabrics that require the lowest heat setting, and then move to heavier fabrics such as wool, cotton and linen.
- Check with the label on the garment for the correct ironing instructions and then turn the temperature control knob to the setting required for the desired fabric.
- Use the iron evenly without pressing it hard.

## **Cleaning and Maintenance**

- Always remove the plug from the wall socket and shut down completely prior to cleaning.
- Do not use abrasive sponge, scouring pads or stiff brush to clean the appliance.
- Use only damp cloth to wipe the exterior surfaces of the unit. Do not immerse the main body in water.
- After finish using, make sure the temperature control knob is at min position and put the iron on its heel to let it cool down and wind the cord around the rear of the iron.
- For proper storage, always place the iron in a low humidity environment.

## **Important Guidelines**

- Use only original accessories supplied.
- The current voltage which indicates on the plate must correspond to your local voltage.
- The iron should be used only on condition that the type of power supply corresponds to the marking label. Otherwise, it will not work or even be damaged.
- Do not use the appliance if the power supply cord or plug has been damaged.
- This iron is intended for indoor and household use only. It is not suitable for outdoor, commercial and industrial use.
- Do not immerse the cord, plug or appliance in water or other types of liquid and do not pour water onto it to prevent from fire, electrical shock or personal injury.
- To protect against risk of electrical shock, do not force any foreign objects such as pins and wires into any openings.
- Do not pull the cord to remove the plug from the wall socket. Remove by pulling the plug instead.
- Do not attempt to insert or remove the plug with wet hands.
- Do not place the appliance on or near hot gas burner, electric burner or a heated oven.
- Do not let cord hang over the edge of table, counter or touching any hot surface.
- In the event of not using the appliance for a long period of time, remove the plug from the power outlet.
- Do not allow the motor or other electrical components to be exposed to water.
- Do not allow children to use electrical equipment without adults' supervision.
- Educate children about the danger and safety rules associated with operating electrical equipment.
- This appliance should not be used by the physically challenged, slow response or mentally disabled person (including children) unless guidance is provided during operation.

- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Repairs and services should always be carried out by CORNELL Customer Care/Service Centre.

#### Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.