


**CORNELL®**

# User Manual

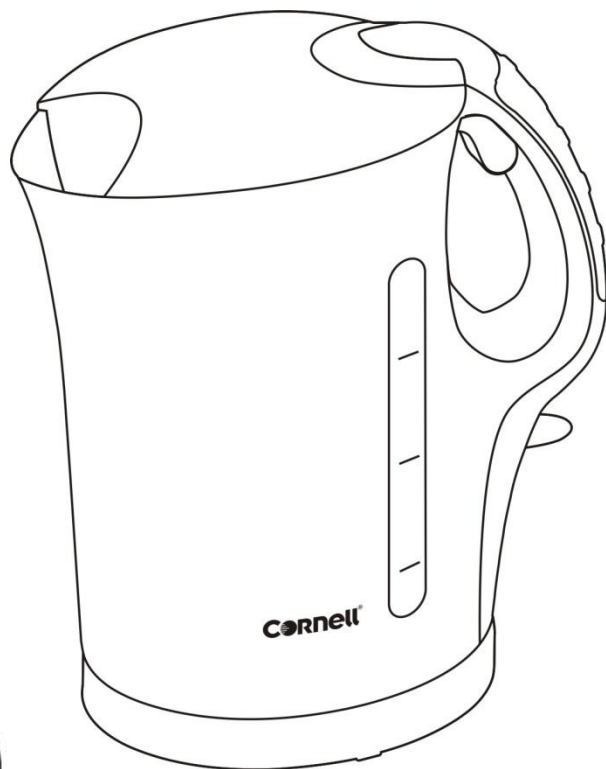

**Jug Kettle**


CJK-S10L

CJK-S17L

## GENERAL SAFETY PRECAUTIONS

1. Thank you for your purchase of this appliance. Read all instructions carefully. Keep this User Manual for future reference.
2. Always unplug the appliance from the power socket before cleaning or when not in use.
3. Always attach the power cord to the appliance first **BEFORE** plugging it into the power socket. To disconnect the appliance, switch it off first before removing the power plug from the power socket.
4. This product must not be left unattended while it is connected to the mains supply.
5. Close supervision is necessary when operating the appliance near children. Ensure that the power cord does not hang over the work surface.
6. Do not use the appliance for other than its intended use.
7. Do not operate the appliance with a damaged power cord set or plug. Any repairs should always be undertaken by an authorized service centre.
8. Always place the appliance on a flat sturdy surface.
9. Do not immerse the appliance or its electrical parts into water or any other liquids.
10. Use of accessories or equipments not supplied by the manufacturer may result in damages or malfunction on the appliance or injuries to the user.
11. This appliance should not be used by people who are physically or mentally impaired (including children) unless proper guidance is provided during operation.

## PART IDENTIFICATION

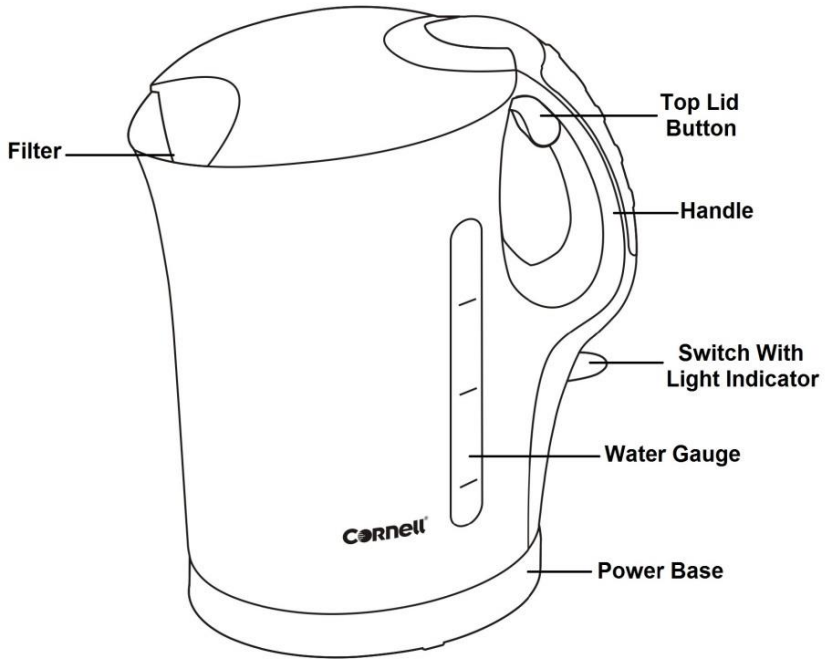

## SPECIFICATIONS

| Model         | CJK-S10L        | CJK-S17L   |
|---------------|-----------------|------------|
| Rated Voltage | 220-240V~, 50Hz |            |
| Rated Power   | 750-900W        | 1850-2200W |
| Capacity      | 1.0L            | 1.7L       |

# OPERATING INSTRUCTIONS

## **Before Using**

- Please read these instructions carefully before using this appliance and keep them for future reference.
- Ensure that the local mains voltage is same as stated on the appliance.
- Never use the appliance near to the sink, bathtub, shower or any other places that may contain water.
- Remove any protective films or stickers from the appliance before using it for the first time.
- For first time use. Boil and discard the water at least twice without adding any chemicals or other additives.
- Ensure that the switch is in the OFF position before plugging the appliance to the power socket.

## **Operating Instruction**



- Fill the kettle with water as required. You may refer to the water level indicator as reference. Do not fill water exceeding the “MAX” mark or below the “MIN” mark.
- Position the kettle on the base unit and connect to the mains electricity.
- Press down the switch to start operating. The boiling indicator light will be illuminated.
- You may interrupt the boiling process at any time by lifting up the switch to turn off the power.
- The kettle will turn off automatically when the water is boiled. The boiling indicator light will also turn OFF.
- Disconnect the kettle from the mains electricity.
- Do not open the lid whilst pouring as the hot steam or hot water may splash on your hand.

- Note: This appliance comes with a safety switch which will automatically turn off the power when the appliance is inadvertently switched on when it is empty or dry boil. In this case, let the appliance to cool down completely, before filling the water again.

## CARE AND CLEANING

Before commencing to clean the kettle, ensure that the mains power is switched OFF and the power cord is removed from the appliance. Wait until the appliance is at room temperature before commencing to clean it.

- Never immerse the appliance into water, or allow moisture to contact with it.
- When it is necessary, the exterior surfaces may be cleaned with a soft damp cloth. Never use any chemical or abrasive solution to clean the kettle.
- To clean the interior of the kettle, use a food-grade descaling compound manufactured for this purpose, such as citric acid.

|  |   |
|--|---|
| <br> | <p>This marking indicates that this product should not be disposed with other household wastes throughout the nation. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.</p> |
|--|---|

**CORnell®**