




SANDWICH MAKER

CSM-2318

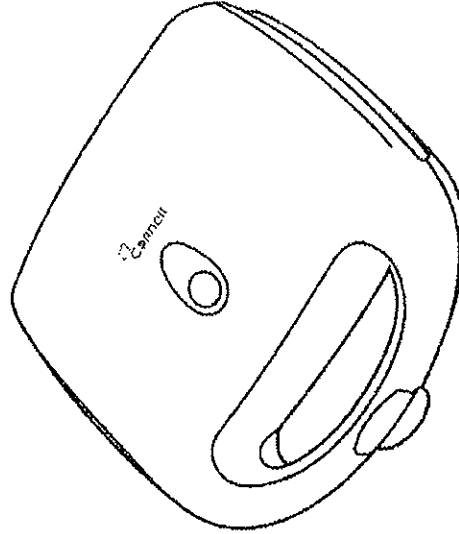

Instruction Manual

Please read this instruction carefully before operating the appliance.

Important Safety Precaution

1. Always switch off and unplug the appliance from the Mains electrical supply **BEFORE** cleaning and also when the appliance is not in used.
2. **NEVER IMMERSE THE APPLIANCE, POWER CORD OR PLUG INTO WATER OR OTHER LIQUID.** See instructions for cleaning.
3. Close supervision is needed when operating appliance near children.
4. Always connect the power cord to the appliance **BEFORE** you plug in to the Mains electrical supply. To disconnect the appliance, switch off the Mains electrical supply before removing the plug from the appliance.
5. Do not operate appliances with damaged cord set, or plug. Any repairs should always be done by the Customer Service Centre or by an authorized service centre.
6. Do not place the appliance on or near a hot gas or electric burner, in a heated oven, or near easily flammable material.
7. Do not use in outdoors or while standing in a damp area.
8. Do not use appliance for other than its intended use. This appliance is intended for household use only.
9. Always place appliance on a flat sturdy surface. When moving appliance, always be aware not to touch the hot surface, or possible spillage of hot liquid it may contain.
10. Use of accessories or equipments not supplied by the manufacturer may cause damage or malfunctioning of your appliance or result in injuries.
11. Close supervision is needed when operating near children or infirm persons.

Hints for best result

1. Always preheat before use. Plug cord into power outlet while preparing the fillings.
2. For soft or liquid sandwich fillings use medium sliced bread, white or brown.
3. Flavored butter may also be used.
4. For added flavor use bacon dripping. Brush dripping on outside of bread.
5. Suggested garnishes for savory sandwiches, lettuce, parsley, mint, cress, stuffed olive halves, onion, tomato etc.
6. A teaspoon of sugar sprinkled on the outside makes toasted sandwiches crisper (especially with fruit fillings).

Care and Cleaning

- After use and before cleaning remove plug and wait for toaster to cool.
- Wipe the inside and the edges of the plate with or a soft cloth.
- Should any filling be difficult to remove, pour a small amount of cooking oil onto the plate and wipe off after 5 minutes when the food has softened.
- Wipe the outside with only a slightly moistened cloth ensuring that no oil or grease enters the heating slots.
- Do not clean the inside or outside with any abrasive scouring pad or steel wool as this damage the finish.