

# CORNEll<sup>®</sup>

## WAFFLE MAKER

### CWM-2308




## Instruction Manual

Please read this instruction carefully before operating the appliance.


## Important Safety Precaution

1. Always switch off and unplug the appliance from the Mains electrical supply **BEFORE** cleaning and also when the appliance is not in used.
2. **NEVER IMMERSE THE APPLIANCE, POWER CORD OR PLUG INTO WATER OR OTHER LIQUID.** See instructions for cleaning.
3. Close supervision is needed when operating appliance near children.
4. Always connect the power cord to the appliance BEFORE you plug in to the Mains electrical supply. To disconnect the appliance, switch off the Mains electrical supply before removing the plug from the appliance.
5. Do not operate appliances with damaged cord set, or plug. Any repairs should always be done by the Customer Service Centre or by an authorized service centre.
6. Do not place the appliance on or near a hot gas or electric burner, in a heated oven, or near easily flammable material.
7. Do not use in outdoor or while standing in a damp area.
8. Do not use appliance for other than its intended use. This appliance is intended for household use only.
9. Always place appliance on a flat sturdy surface. When moving appliance, always be aware not to touch the hot surface, or possible spillage of hot liquid it may contain.
10. Use of accessories or equipments not supplied by the manufacturer may cause damage or malfunctioning of your appliance or result in injuries.
11. Close supervision is needed when operating near children or infirm persons.

# Part Identification and Specifications

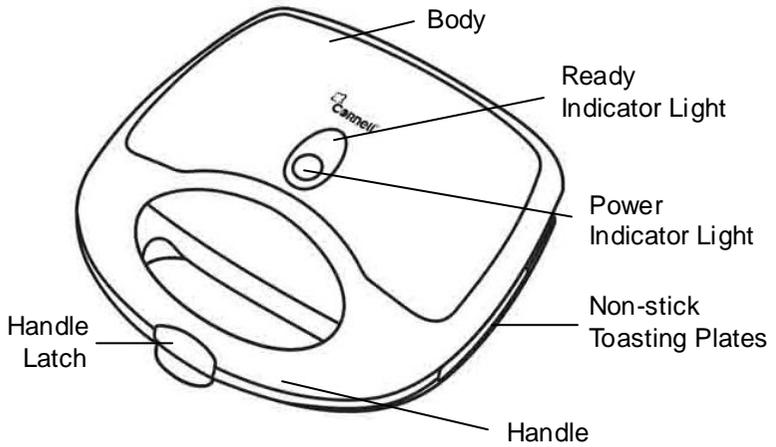

## Toasting Plates

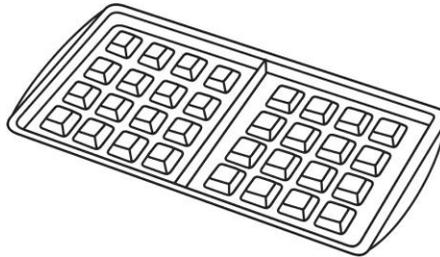

## Specifications

MODEL	<b>CWM-2308</b>
RATED VOLTAGE	220-240V~
RATED WATTAGE	700W
FREQUENCY	50Hz

# How to Operate Your Waffle Maker

## **Before use for the first time**

When using for the first time, wipe the surface of the platens with a damp cloth and dry with cloth, tissue etc. Then smear the platen with butter, margarine or cooking oil.

## **How to use**

1. Connect the plug into the wall socket. You will notice the power and ready indicator light is on, indicating that the Waffle maker is under pre-heating and will go off after 2 – 3 minutes.
2. After that, fill the lower mould's surface with prepared batter.
3. Close the waffle maker. The green temperature indicator light will be lit after approximately after 3 minutes, indicating that the waffle is ready. Your waffle will be ready in 2 – 3 minutes or longer to suit your taste.
4. Open the waffle maker to remove the waffles when it is ready, preferably with a two-pronged fork or wooden spatula. Do not use metal knife as this may damage the non-stick coating.
5. Close the lid to preserve the heat until ready to do the next waffle.
6. After use, remove the plug from the wall socket.

## Recipe

- 2 eggs
- 2 cups all-purpose flour
- 1 3/4 cups milk
- 1/2 cup vegetable oil
- 1 tablespoon white sugar
- 4 teaspoons baking powder
- 1/4 teaspoon salt
- 1/2 teaspoon vanilla extract

## Directions

1. Preheat waffle maker. Beat eggs in large bowl with hand beater until fluffy. Beat in flour, milk, vegetable oil, sugar, baking powder, salt and vanilla, until smooth.
2. Pour batter onto hot waffle maker. Cook until golden brown. Serve hot.

## Care and Cleaning

- After use and before cleaning remove plug and wait for toaster to cool.
- Wipe the inside and the edges of the plate with a soft cloth.
- Should any filling be difficult to remove, pour a small amount of cooking oil onto the plate and wipe off after 5 minutes when the food has softened.
- Wipe the outside with only a slightly damp cloth ensuring that no oil or grease enters the heating slots.
- Do not clean the inside or outside with any abrasive scouring pad or steel wool as this will damage the finish.