

CORNELL®

User Manual

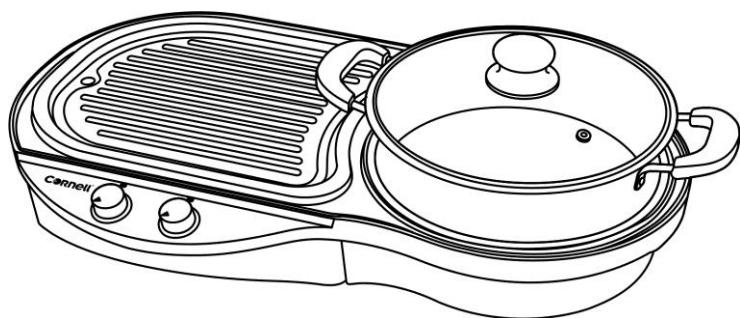 



Table Top Grill with Hotpot
CCG-EL88DT

Safety Precautions

1. Read all instructions carefully before use and keep them for future reference.
2. Ensure that the voltage range shown on the appliance rating label corresponds to the main power supply's voltage.
3. This appliance is suitable for normal household use only and not for commercial use.
4. This product must not be left unattended while it is connected to the main supply.
5. Use the appliance only on a level working surface.
6. Do not operate the appliance with a damaged power cord or power plug. Return the appliance for examination, adjustments, or repair.
7. The use of extra attachments not recommended by the manufacturer may cause fire, electrical shock, or injury.
8. Unplug the unit when not in use and whenever you clean or move the unit.
9. To disconnect the appliance, grip power plug and pull from power outlet. Never yank on power cord.
10. Only authorized service personnel should be allowed to undertake repairs on electrical appliances. Repairs undertaken by unauthorized persons may result in damage to the appliance and/or accidents or injury to the user.

11. If the power supply cord is damaged, have it replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
12. This appliance should not be used by the physically and mentally challenged or those with slow response (including children) unless sufficient supervision is provided during operation.

 Parts Identification

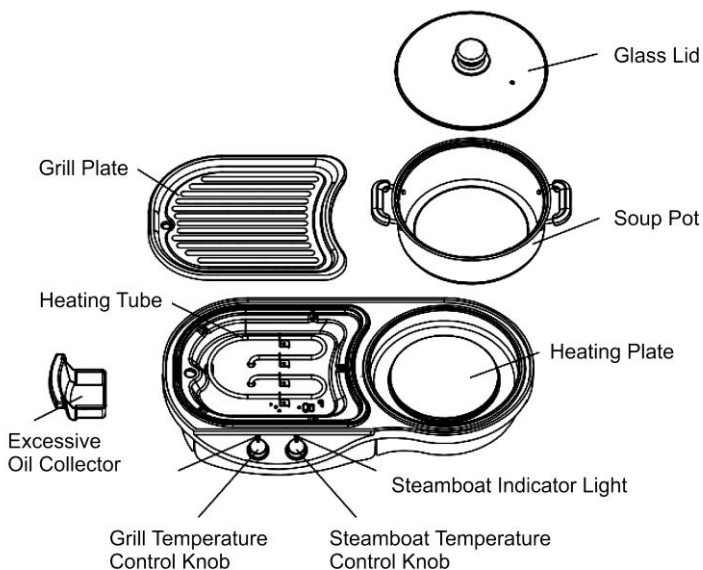

Specifications

Model	CCG-EL88DT
Voltage	220-240V~
Frequency	50/60Hz
Hot Pot Power	900W
Grill Power	800W

Operating Instructions

Before Using For the First Time

1. Remove all packaging material.
2. Wash the grill plate, soup pot and glass lid with lukewarm water. Dry thoroughly before using.
3. Place the grill plate and soup pot inside the table top grill properly, placing it well on the heating element.

Steamboat Operation:

1. Before each operation, check and remove any foreign matters that are trapped between the heating element. Ensure the surface of the heat plate is clean and dry.
2. Put the soup pot properly on the heating plate, add soup (water) into the pot and cover the lid.

3. Turn the steamboat temperature control knob to the “OFF” position. Plug the power plug to the power outlet.
4. Turn the steamboat temperature control knob to the “HIGH” position, the steamboat indicating light will turn on to indicate that the appliance is working with full power.
5. Please notice when the water or soup is boiled, turn the steamboat temperature control knob counter-clockwise from “MID” position to “LOW” position, the indicating light will be off once the water temperature reaches to the set degree; The light will be on again to resume working when the water temperature falls below the setting level.
6. Add the food into the soup pot as soon as the water or soup starts to boil.
7. After using, turn the steamboat temperature control knob counter-clockwise to the “OFF” position.

Grill Plate Operation:

1. Put the grill plate on top of the heating tube properly.
2. Turn the grill temperature control knob to the “OFF” position, Plug the power plug to the power outlet.
3. Turn the grill temperature control knob to the “High” position, the indicating light will turn on to indicate that the appliance is working. After the grill plate hot up, turn the grill temperature control knob counter-clockwise to the position from “MID” position to “LOW” position, the

indicating light will be off once the temperature of grill reaches the set degree; the light will be on again to indicate the resuming of heating process when the temperature of grill falls below the setting level.

4. Put the food on the grill plate.
5. After using, turn the grill temperature control knob counter-clockwise to the "OFF" position.

CAUTION:


- Do not scratch the grill and soup pot surface. Use non-metallic implements only.
- Do not touch hot surfaces. Use oven mitts to remove grill plate or soup pot while the appliance is hot. Always place appliance on a heat resistant surface.
- Extreme caution should be used when moving table top grill containing hot liquids or oil.
- Do not operate this appliance without the drip pan in place.

Cleaning and Maintenance

- Always disconnect the appliance from the main unit before cleaning.
- Always allow your appliance to cool completely before cleaning.
- Never immerse the appliance completely in water or any other liquids.
- Wash grill plate, soup pot and the glass lid with lukewarm water and dry thoroughly before storage.

CAUTION: Never use metal cleaning implements to clean the unit. Use only soft cleaning sponges.

- Only wipe the table top grill with soapy cloth and wipe continuously with dry cloth until it is clean.

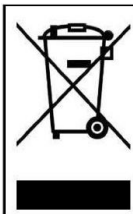

This marking indicates that this product should not be disposed with other household wastes throughout the nation. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

