


CORNELL®

User Manual

BILINGUAL
双语

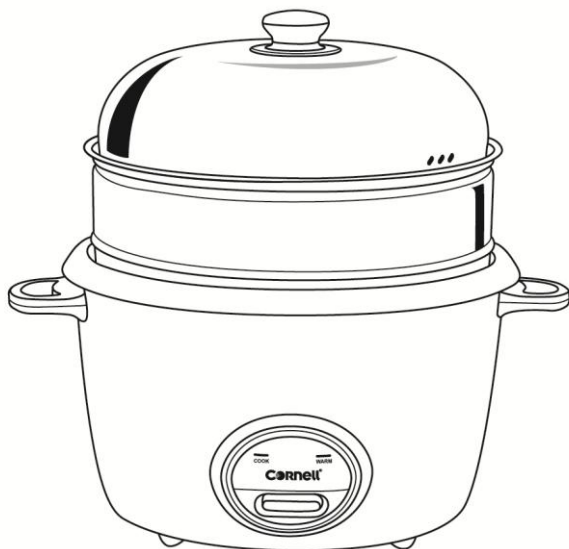

Rice Cooker

CRC-CP220SS

GENERAL SAFETY PRECAUTIONS

1. Please read this instruction booklet carefully before operating the appliance.
2. Always unplug the Rice Cooker from the Mains electrical outlet before cleaning it or when not in use.
3. Always attach the power cord to the Rice Cooker BEFORE plugging it to the Mains electrical outlet. To disconnect the Rice Cooker, switch it off first before removing the plug from the Main electrical outlet.
4. Do not operate the Rice Cooker with damaged power cord set or plug. Any repairs should always be done by an experienced technician or by an authorized service center.
5. Do not allow children to operate this appliance and always keep it away from children's reach to prevent scalds, electric shocks or other injuries.
6. Always place the Rice Cooker on a flat sturdy surface. When moving it, always be aware not to touch on hot surface or any hot liquid it may contain.
7. Do not immerse appliance or electrical parts into water or any other types of liquid.
8. Use of accessories or equipment not supplied by the manufacturer may result in damages or malfunction on the Rice Cooker or injuries to the user.
9. Do not touch hot surface. Use oven mitts and hold the side handles to move it while the appliance is hot.
10. This appliance is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or lack the experience and knowledge unless they have been

given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

11. Do not use the Rice Cooker for other than its intended use.

PARTS IDENTIFICATION



SPECIFICATIONS

Model	CRC-CP220SS
Rated Voltage	220-240V~
Rated Power	700W
Frequency	50/60Hz
Capacity	2.2 litre

OPERATION INSTRUCTION

HOW TO USE:

Use the following as a GUIDE only as the ratio between rice and water change according to the rice grain type and user preference:

Note: This appliance is recommended to cook a minimum of 2 cups and a maximum of 12 cups of rice grains.

Water Level Ratio for White Rice

White Rice (Cup)	Inner Pot Water Capacity (Cup)
2	2 ½
3	3 ½
4	4 ½
5	5 ½
6	6 ½
7	7 ½
8	8 ½
9	9 ½
10	11
11	12
12	13

Note: The amount of water to be added to the inner pot is based on the measuring cup that is supplied in the unit packaging.

xxRecommend to use steam bowl to cook the rice even more delicious and taste better.

Water Level Ratio for Steaming White Rice

White Rice (Cup)	Steam Bowl Water Capacity (Cup)	Inner Pot Water Capacity (Cup)
1	1	2
2	2	2
3	3	2
4	4	2
5	5	2
6	6	2

1. Adjust the amount of water in the outer pot depending on the type of food and self-preference.
2. Insert the Stainless Steel Rack into the unit body.
3. Pour water into the outer pot based on the water level ratio provided in the manual or can also adjust according to self-preference.
4. Place the steam bowl on the top of the rack and put the lid on the top of the body.
5. When ready to cook. Plug the unit into the convenience outlet.
 - Do not plug the unit, until cooking is ready
6. Press down the switch. The “cook” light will turn ON and rice will start to cook.
 - If the switch knob failed to push down, the “warm” light will turn ON, the rice will not be cooked

7. Once the rice is cooked, the Rice Cooker will automatically switch to KEEP WARM mode. The KEEP WARM indicator light (green) will light up.
8. For best result, it is recommended that the Keep Warm function is allowed to continue for about 15 minutes before opening the lid to scoop the rice for serving.
 - Do not warm the rice for more than 3 hours.
(It may result in color change and bad smell)
9. Use only the spatula supplied with this unit to avoid scratches.
10. Unplug the unit after every use.

STEAMING

Note: Steaming of frozen foods, add at least 2 cups of water into the outer pot.

1. Adjust the amount of water in the outer pot depending on the type of food and self-preference.
2. Pour water into the outer pot based on the water level ratio provided in the manual or can also adjust according to self-preference.
3. Place steam tray on top of the unit body.
4. Arrange food for steaming inside the steam tray and cover it.
5. Plug the cord into the convenience outlet and press down the switch to start cooking.

Method	Water Ratio and Time Cooking of Outer Pot			Menu
	½ Cup of Water	1 Cup of Water	2 Cups of Water	
Steam	10 Minutes	20 Minutes	30 Minutes	Buns, Steam Bread, Egg, Fish, Meat, Etc.
Stew	25 Minutes	45 Minutes	55 Minutes	Stew 1kg of Chicken or Mung Beans

** The above information is for reference only.

CARE AND CLEANING

Always unplug the unit before cleaning. Never do the cleaning when the cooker is still hot.

1. To protect from electrical hazards, do not immerse the unit and electric cord in water.
2. Lid, spatula, steamer, rack and inner pot are washable with soap and water.
3. Do not use abrasive materials to avoid scratches.
4. Wipe the body with damp cloth.
5. Grains of rice or residues may adhere to the heater plate. Make sure that the heater plate is free from residues.



This marking indicates that this product should not be disposed with other household wastes throughout the nation. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

注意安全事项

1. 使用前请仔细阅读说明书，并保留以供日后参考。
2. 清洁前或不使用时，请拔下电源插头。
3. 在接通电源之前，务必将电源线连接到电饭煲上。要断开电源，请先将其关闭，然后再从主电源插座上拔下插头。
4. 请勿在电源线损坏的情况下操作电饭煲。如果电源线损坏则必须由经销商更换，请勿尝试自行更换电源线。
5. 应监督儿童以确保他们不戏玩本产品。并始终将其远离儿童，以防止烫伤，电击或其他伤害。
6. 请在平坦的台面上使用本产品。移动时，请勿触摸热表面或其可能含有的任何热液体。
7. 禁止将产品（包括电源线和插头）浸入水中，防止电击。
8. 使用非制造商提供的配件或设备可能导致电饭煲损坏或故障或对用户造成伤害。
9. 请勿触摸热表面，使用烤箱手套并握住侧把手将它移动。
10. 本产品不适合体能，感官或心智功能不足者以及缺乏经验和知识的人员（包括儿童）使用，除非负责其人身安全的人员在其使用本产品时进行监督或提供指示。
11. 不要将产品用于其他用途。

零件名称



饭勺



量杯

规格

型号	CRC-CP220SS
电源	220-240V~
功率	700W
频率	50/60Hz
容量	2.2-Litre

使用方法

水量可根据米的新鲜度或质量和用户偏好而变化，仅使用以下作为指南。

注意：饭锅煮饭建议最少 2 杯米，最多煮 12 杯米。

：加入饭锅的水量取决于包装里所提供的量杯。

煮白米水位比例

白米 (杯)	不锈钢饭锅 水容量(杯)
2	2 ½
3	3 ½
4	4 ½
5	5 ½
6	6 ½
7	7 ½
8	8 ½
9	9 ½
10	11
11	12
12	13

xx建议用蒸锅蒸饭更美味，味道更好。

蒸白米的水位比例

白米 (杯)	蒸锅水容量 (杯)	饭锅水容量 (杯)
1	1	2
2	2	2
3	3	2
4	4	2
5	5	2
6	6	2

1. 水量也可根据米的新鲜度或质量进行调整。
2. 将不锈钢蒸架放入不锈钢饭锅内。
3. 根据所提供的蒸白米饭锅水容量将水倒入饭锅中，或者也可根据自己的喜好进行调节。
4. 将不锈钢蒸锅放在蒸架上，然后盖上锅盖。
5. 将电源线插头插入电源插座，打开电源。
未准备好之前，请勿插入电源。



6. 按下开关，“煮”指示灯将亮起，表示正开始烹饪。
如果没有按下开关钮，“保温”灯将亮起，米饭将不会被煮熟。
7. 饭煮熟后，电饭煲将自动切换到“保温”功能。“保温”指示灯（绿色）将亮起。
8. 为了获得最佳效果，建议持续“保温”约 15 分钟方打开盖子舀米饭。
 - 请勿将米饭保温超过 3 小时以上。（可能会导致米饭颜色变化和难闻的气味）。
9. 建议使用本机随附的饭勺。
10. 每次使用后请拔下电源插

蒸煮

注意：蒸煮冷冻食品，在饭锅中至少加入 2 杯水。

1. 根据食物种类和自我偏好调整饭锅中的水量。
2. 根据手册中提供的水位比将水倒入饭锅中，或者也可根据自己的喜好进行调节。
3. 将不锈钢蒸笼放在饭锅上。
4. 把要蒸煮的食物放入不锈蒸笼内并盖上锅盖。

5. 将电源线插头插入电源插座，打开电源，然后按下开关以开始蒸煮。

方法	饭锅的水位比例及蒸，炖时间			菜单
	½ 杯水	1 杯水	2 杯水	
蒸	10 分钟	20 分钟	30 分钟	包子, 面包, 蛋, 鱼, 肉和其他。
炖	25 分钟	45 分钟	55 分钟	炖大约 1 公斤的鸡或绿豆汤。

**以上资料仅供参考。

清洁和保养

1. 清洁之前，请拔出电源插头。在产品冷却之前，请勿进行清洁。
2. 切勿将产品浸入水或任何其他液体中。
3. 使用温肥皂水清洗饭锅，蒸锅，蒸架，锅盖和饭勺。
4. 请勿使用研磨性海绵，以免破坏内锅表面
5. 用微湿的软布拭擦外锅表面。
6. 清除加热元件和中央恒温器上下方的任何异物。

